



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Wolder miTab Masterchef Power and volume keys

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Kit of tools
profesional 70 in 1 -
ARTICLE NUMBER:
LSP031634

16,67 €

Step 1

Cooking guide to repair your Wolder myTab Masterchef.

Specifications

Screen: 7.9 "HD, 1024 x 768 pixels (4: 3), 160 X 120 mm

Processor CPU: Quad Core 1.3 GHz

Graphics processor: 3D Dual Core

Memory: 1 GB RAM, 8 GB Flash

Battery: 3000 mAH

OS: Android 4.4

Before you start, make sure you have the tablet and the kitchen turned off.





Step 2 - Back cover

To remove the back cover we must unhook the plastic notches located around the contour.

We recommend the plastic opening tool, so as not to scratch the case.





Step 3 - Power and volume keys

Finally, remove the side keys from the back cover.



