



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Samsung Galaxy A5 (2017) Front buttons

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Flex cable with lower back buttons and menu for Samsung Galaxy A5 (2017),

1,34 €



Heat-opening thermal mat, CPB320

69,61 €



Professional disassembly spatula for mobile phones and smartphones

2,71 €



Opening tool Smartphone, tablet

2,19 €



Pinza antiestática ESD redondeada

3,06 €



Flexible plastic card for easy opening

0,98 €



Set of professional tools for opening smartphones and tablets

18,97 €



Special SAT 0.70mm PET pick, high friction and resistance

1,25 €



Suction cup for disassembling and repairing

0,51 €



Smartphones and PC repair tool case

35,92 €



Touch ESD glove, for antistatic protection, size M

4,16 €

Step 1 - Remove back cover


To remove the back cover, we will detach it by inserting a spike between it and the frame. To make the task easier, we can heat the lid for approximately one minute at 60°C.





Step 2 - Remove intermediate housing

We extract the screws indicated in the second image to be able to remove the intermediate casing and the lower antenna module.

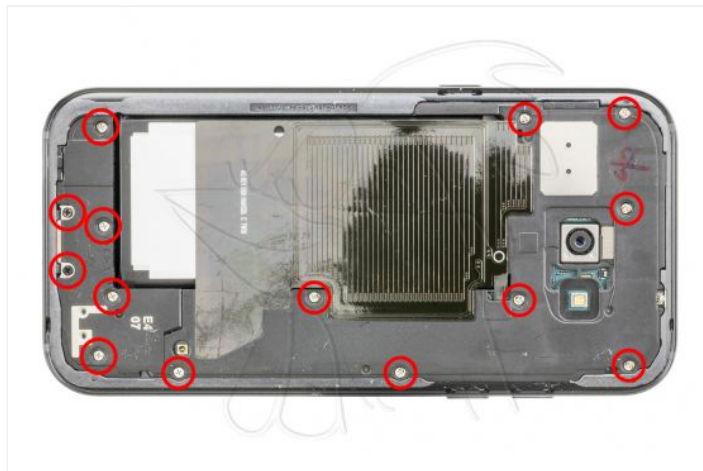



Step 3 - Disconnect components

In order to remove the motherboard, first disconnect the components.





Step 4 - Removing the motherboard

Remove the screws that hold the motherboard and the SIM and SD trays.

Now we can remove the motherboard.





Step 5 - Take off screen

To unstick the screen, we introduce an opening tool between it and the frame. Sliding it around the contour, we will take off the screen.

To facilitate the process, we can heat the screen to about 60°C for about a minute.





Step 6 - Home button

To finish, we took off the flex of front buttons.



