



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Wiko View Side push buttons

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Pinza antiestática
curva Baku ESD BK-
15

3,50 €



Professional
disassembly spatula
for mobile phones
and smartphones

2,71 €



Opening tool
Smartphone, tablet

2,19 €



Set with screwdriver
and 6 bits BST-8927B

8,82 €

Step 1 - Remove back cover

We start by removing the back cover. To do this, we introduce an opening tool between it and the frame. Making leverage movements, we will manage to release it.





Step 2 - Remove battery

In this step, we simply remove the battery by levering it to disengage it.





Step 3 - Remove intermediate housing

Remove the six Phillips screws (PH # 00) that hold the intermediate casing and disengage it.



Step 4 - Side push buttons

To finish, we disconnect the flex from the push buttons on the base plate and take it off the chassis.

