



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Nokia 7 Plus WIFI antenna

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.




Set of 5 metal picks
for opening

3,09 €



Opening tool
Smartphone, tablet

2,19 €

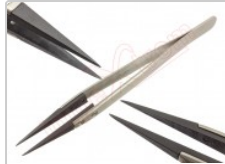

Electrical dissipating
clamps, in blister

3,97 €



6-in-1 screwdriver, K-
8107 with different
heads, in blister

7,52 €

Step 1 - Opening

Use the prong to separate the screen from the housing.








Step 2 - Extract screen

Remove the screw that covers the lid of the flex connection to remove it, with the opening tool release the connection of the flex.





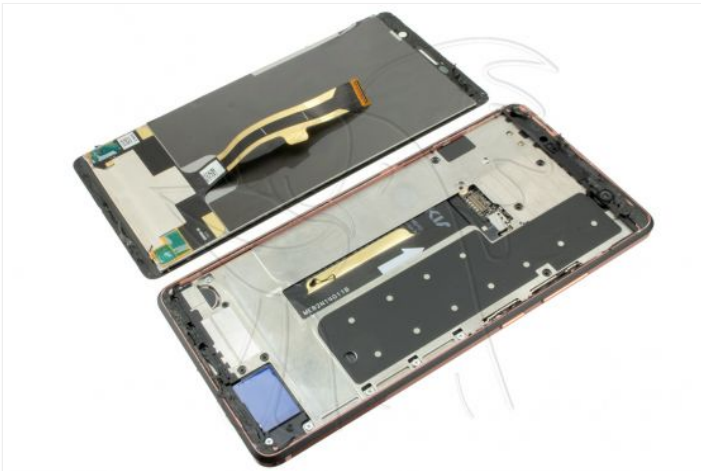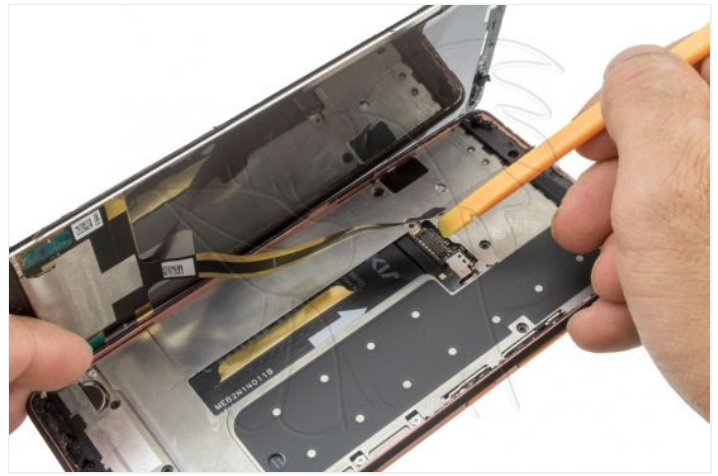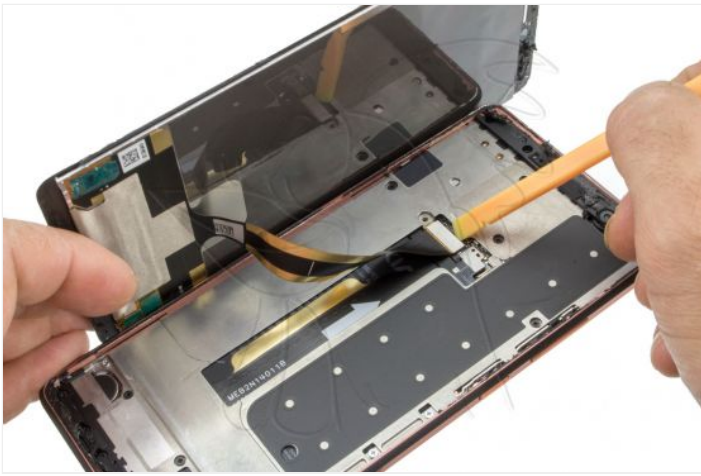

Step 3 - Remove chassis

Remove all screws and use the opening tool to remove the chassis.



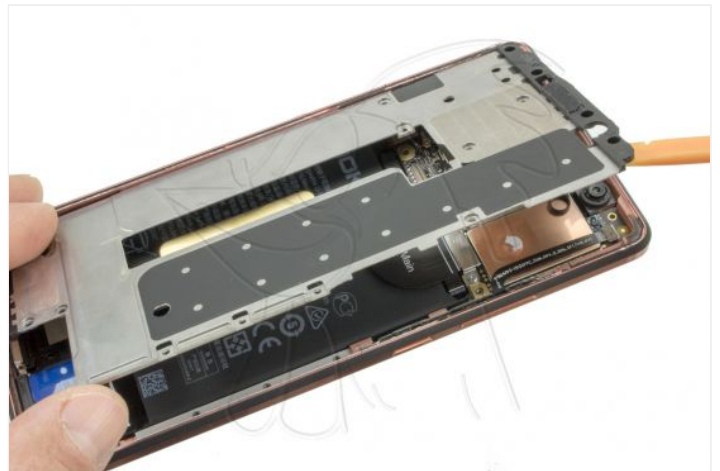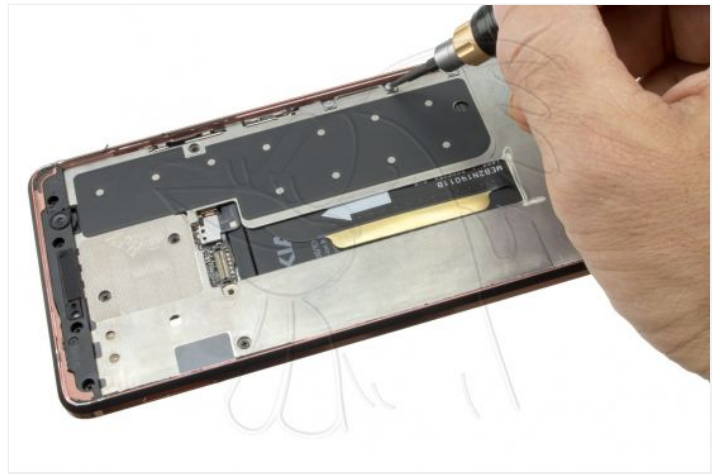

Step 4 - Release connections

With the opening tool release the coaxial cable connection. Unscrew, remove the connection cover of the battery and release the connection. Unscrew and remove the cover of the camera connection and release the connections. With the opening tool remove the battery.





Step 5 - Remove motherboard

With the opening tool release the remaining connections, remove the audio connector and remove the motherboard ..





Step 6 - Extract WIFI antenna

With the clamps remove the antenna from the housing.

