



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Realme 6 Vibrator

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



BK-7275 (A Version)
5 in 1 screwdriver

6,41 €



Conjunto of 3
espátulas of
desmontaje of tablets
and smartphones

3,97 €



SIM card removal
tool for all brands

1,61 €



Opening tool
Smartphone, tablet

2,19 €



Stripper gun, hot air
welder for repairs

15,59 €



Set of professional
tools for opening
smartphones and
tablets

18,97 €



Special SAT 0.75mm
high friction PVC pick

1,07 €



Generic vibrator
12,52 x 2,74 x 7,93
mm

1,25 €

Step 1 - Back case



First, we will apply heat to the back shell to soften the adhesive that holds it, and then we will introduce one or more plastic spikes, with which it will be less likely to damage the shell, and we will take off all the edges of the shell.





Step 2 - Intermediate housing

We remove the fifteen Phillips screws (PH # 00) that hold the intermediate casing and the trim of the rear cameras, remove the card tray, and unhook the casing.

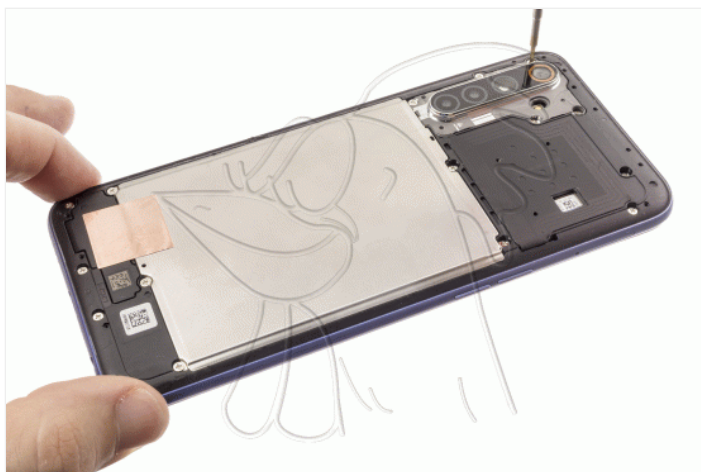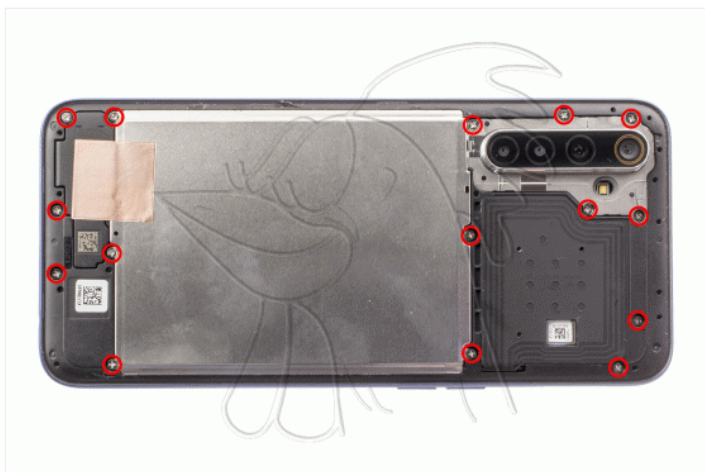




Step 3 - We disconnect battery

We disconnect the battery to work with greater security, and we disconnect the flex from the side button to work more comfortably.



Step 4 - Speaker

We extract the two Phillips screws (PH # 00) that hold the speaker, and with the help of a flat tool we will unhook it.

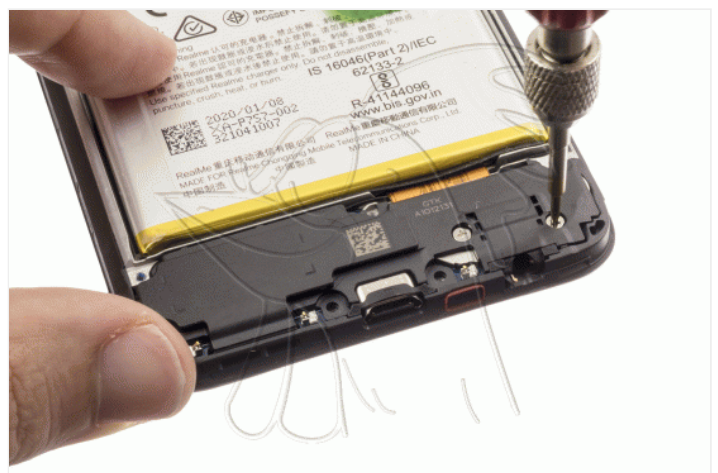



Step 5 - Auxiliary board

We disconnect the bridge flex and the coaxial cable, and with the help of a flat tool we will unhook the auxiliary plate.



Step 6 - Vibrator

To finish, we only have to take off the damaged vibrator that we have to replace.

