



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of LG L80 Speaker

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Buzzer speaker
generic for LG
devices

1,04 €



Head made of
synthetic carbon steel
with titanium handle

18,63 €



Screwdriver with 8
heads Peng Fa 7339A

6,96 €



Opening tool
Smartphone, tablet

2,19 €



Terminal opening
tool, plastic

0,71 €



Electrical dissipating
clamps, in blister

3,97 €

Step 1 - LG L80

Characteristics:

Screen:

Type: IPS

Resolution 480 x 800

Colors 24 bits (16777216 colors)

Tactile Capacitive multitouch 8.2 x 9.7 mm

Camera:

Photo resolutions: 8MP (3280 x 2464)

Video resolutions: HD720p (1280 x 720)

Maximum recording FPS: 30

Internal storage: 8GB

External storage: microSDHC (SD 2.0) (32GB)

RAM memory: 1GB

SO: Android 4.4 KitKat

Battery: Li-Ion 2540mAh



Step 2 - Back case

To open the back cover, we will use a plastic opening tool and we will pry it loose.



Step 3 - Battery and cards


We take out the battery, the SIM card and the SD card.





Step 4 - Intermediate housing screws

Remove the nine Phillips screws (PH # 00) that hold the housing.

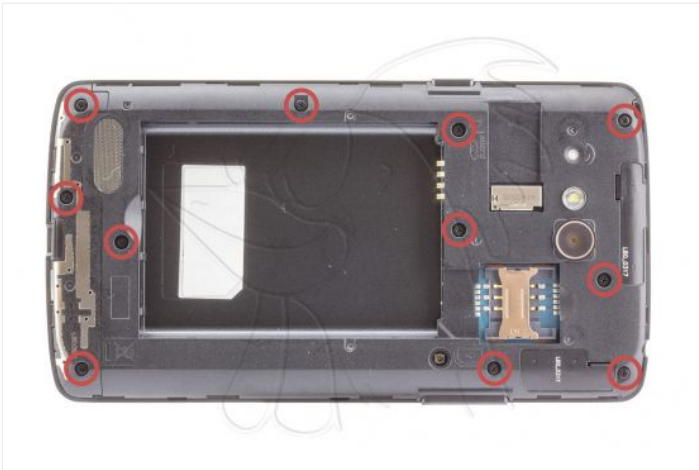

Step 5 - Intermediate housing

Using a plastic opening tool we will separate the chassis housing.





Step 6 - Speaker

The loudspeaker is located on the inside of the intermediate housing. It is only necessary to take it off.

