



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of SPC Gravity Max Speaker

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Professional opening tool with paw-shaped grip

2,71 €



Screwdriver BEST-927B with 9 different interchangeable bits

3,90 €



Analog soldering station, Baku 936

19,47 €



Opening tool Smartphone, tablet

2,19 €



Set of 7 antistatic precision tweezers

4,42 €




Loudspeaker ring tone for SPC Gravity Max

5,60 €

Step 1 - Carcasa trasera



Ayudándonos de una herramienta plástica iremos desenganchando todos los bordes de la carcasa.



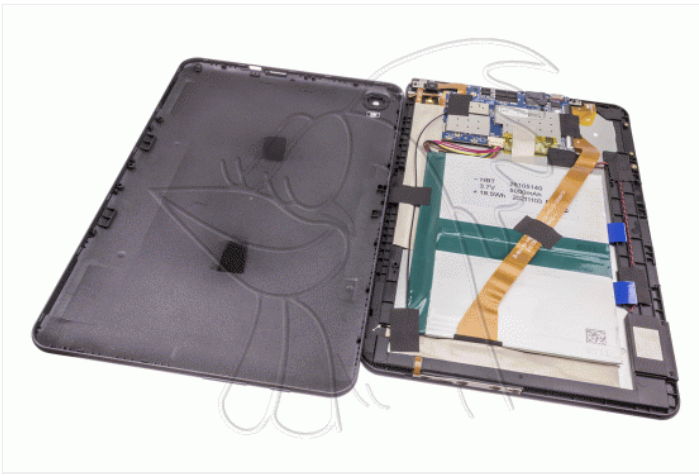



Step 2 - Desconectamos batería

Desconectamos la batería con la ayuda de unas pinzas para así trabajar con una mayor seguridad.

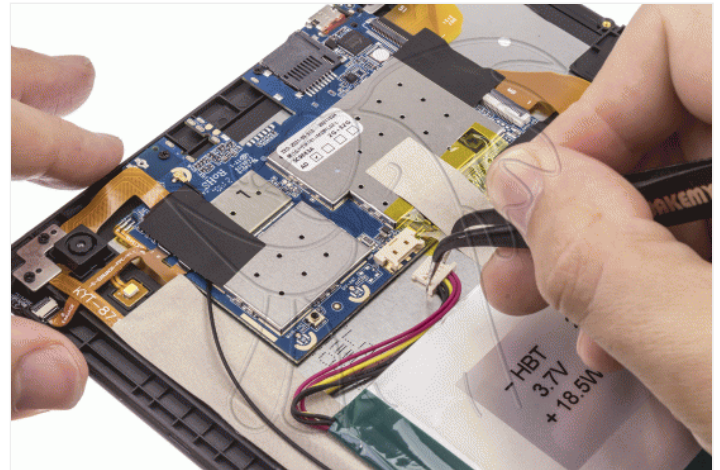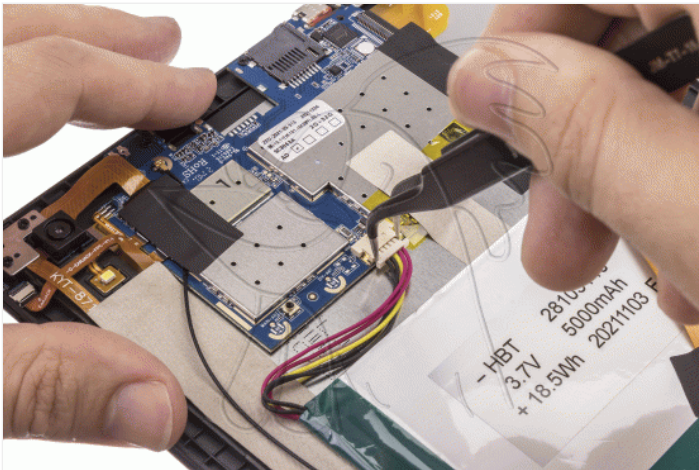

Step 3 - Flex de interconexión

Desconectamos el flex de interconexión, ya que se encuentra por encima de los cables del altavoz.

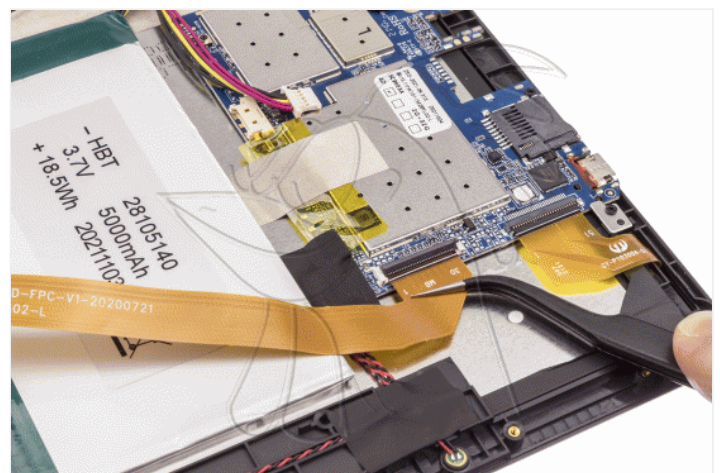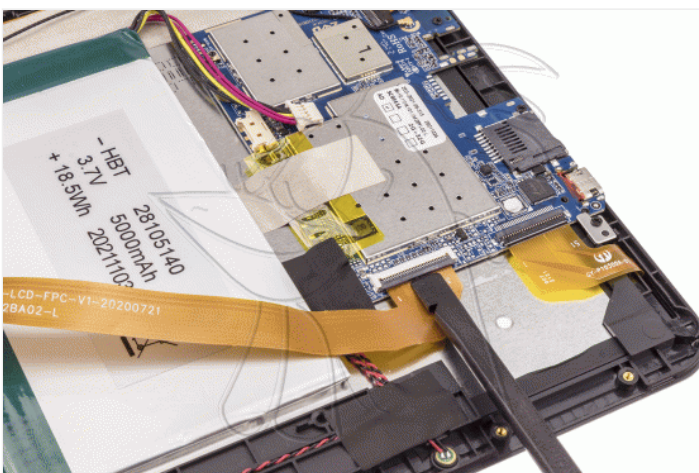

Step 4 - Altavoz

Despegamos el adhesivo que se encuentra por encima de los conectores que tenemos que desoldar, y una vez hemos desoldado los dos cables, extraemos los dos tornillos Phillips (PH#00) que sujetan el altavoz y ya podremos instalar el nuevo en su lugar.

