Step by step tutorial: of LG L Bello Rear button flex

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com Click on a tool for visit the website.



Step 1 - LG L Bello

LG L Bello - Features

SYSTEM: Android 4.4.2 KitKat **SCREEN:** 5 inches (854 x 480 pixels) **PROCESSOR:** Quad Core at 1.3 GHz

RAM: 1 GB

INTERNAL MEMORY: 8 GB + microSD

BATTERY: 2540 mAh **CAMERA:** 8 MP / 1 MP

CONNECTIVITY: HSPA, WiFi, Bluetooth 4.0 **DIMENSIONS:** 138.1 x 70.6 x 10.7 mm

WEIGHT: 130 grams

Before starting, make sure that the mobile is turned off.





Remove the back cover with the plastic opening tool, this will avoid scratching the equipment.















Step 3 - Battery

Remove the battery by pulling on the bottom.









WWW.NADIEMELLAMAGALLINA.COM 3 of 8

Remove the SIM and SD cards.











Remove the 11 Phillips screws that hold the middle housing.





Step 6

Separate the intermediate housing by prying it gently with the opening tool all around. You will hear several "clicks" as they are released.









WWW.NADIEMELLAMAGALLINA.COM 5 of 8







Step 7 - Rear button flex

Remove the plastic holder and the rear keys.





WWW.NADIEMELLAMAGALLINA.COM 6 of 8







Step 8

Peel off the flex contacts on the inside of the housing to finally extract the flex with the buttons.





WWW.NADIEMELLAMAGALLINA.COM 7 of 8





