




NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Samsung Galaxy Core DUOS Bottom plate with microphone and mUSB connector.

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.

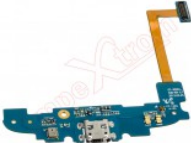

Circuito flex with
microfono and
connector of charge
and accesories

2,21 €



Opening tool
Smartphone, tablet

2,19 €



Terminal opening
tool, plastic

0,71 €



Screwdriver phillips
Head Size 00

1,06 €



Electrical dissipating
clamps, in blister

3,97 €

Step 1 - Back cover

Before starting, make sure that the mobile is turned off.

Remove the back cover with the opening tool, this will prevent scratches on the housing.





Step 2 - Battery

Remove the battery by pulling on the bottom.





Step 3 - MicroSD card

Remove the micro SD card.



Step 4 - SIM card

Remove the micro SIM card.



Step 5 - Intermediate housing

Remove the 9 Phillips screws that hold the intermediate housing.



Step 6

Remove the intermediate housing with the opening tool.



Step 7 - Motherboard

Disconnect the upper end of the coaxial antenna cable.






Step 8

Disconnect the data flexes from the digitizer and display.



Step 9

Separate the base plate from the chassis.

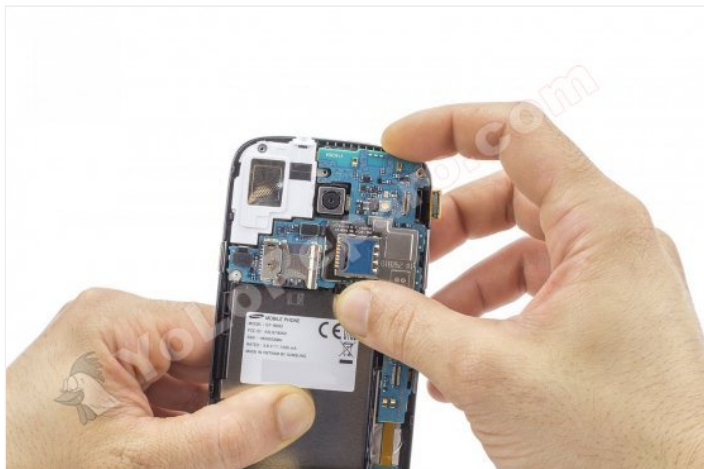

Step 10

Disconnect the lower end of the coaxial cable.



Step 11 - Bottom plate with microphone and mUSB connector

Remove the Phillips screw that holds the bottom plate.



Step 12

Peel off the bottom plate of the chassis.

