



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Gigaset GS170 Side push buttons

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Double SMD
soldering station,
Baku 878

59,85 €



Opening tool
Smartphone, tablet

2,19 €



Pinza antiestática
ESD redondeada

3,06 €



PREMIUM
screwdriver with 24
magnetic
replacement bits

10,41 €

Step 1 - Remove back cover

We start by removing the back cover. To do this we introduce an opening tool between it and the housing. Sliding it around the contour will disengage it.





Step 2 - Remove battery

We disengage the battery by levering through the hole it brings for this purpose.



Step 3 - Remove internal casing

Remove the seven Phillips screws (PH # 00) that hold the casing and disengage it.





Step 4 - Side push buttons

To finish, we take off the flex pushbuttons from the side of the chassis and desoldamos it.

