



**NadieMeLlamaGallina.com**

Porque Yo Lo Reparo

## Step by step tutorial: of Samsung Galaxy A80 Fingerprint reader

For this tutorial you will need the following spared parts and tools that you cant get at our online store [Impextrom.com](http://Impextrom.com)  
Click on a tool for visit the website.



Flex with fingerprint sensor for Samsung Galaxy A80 (A805F) / Samsung Galaxy A50

2,51 €



Heat-opening thermal mat, CPB320

69,61 €



SIM card removal tool for all brands

1,61 €



Opening tool Smartphone, tablet

2,19 €



Pinza antiestática ESD redondeada

3,06 €



Special SAT 0.75mm high friction PVC pick

1,07 €



PREMIUM screwdriver with 24 magnetic replacement bits

10,41 €

### Step 1 - Back case



To begin, we apply heat to the back cover to soften the adhesive that holds it, and with the help of one or more plastic spikes we will take off the back cover.







## Step 2 - NFC antenna

Manually open the camera rail, remove the six Phillips screws (PH # 00) that hold the intermediate housing, and with the help of a flat tool we will unhook the intermediate housing.

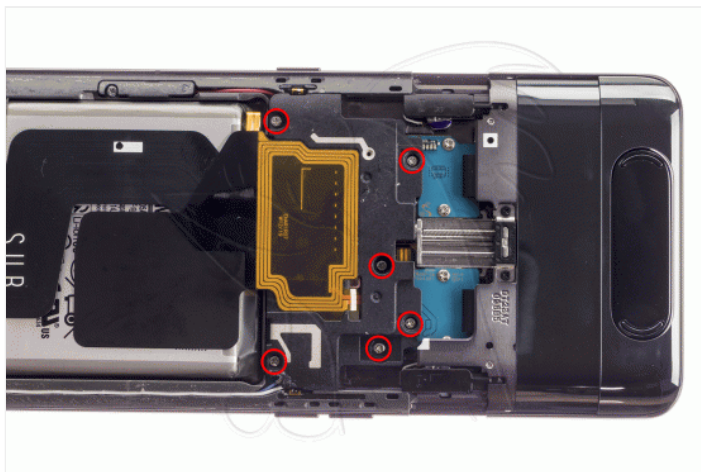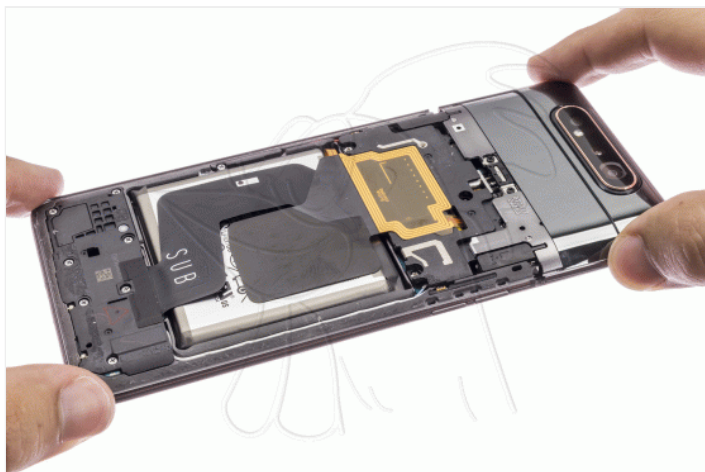



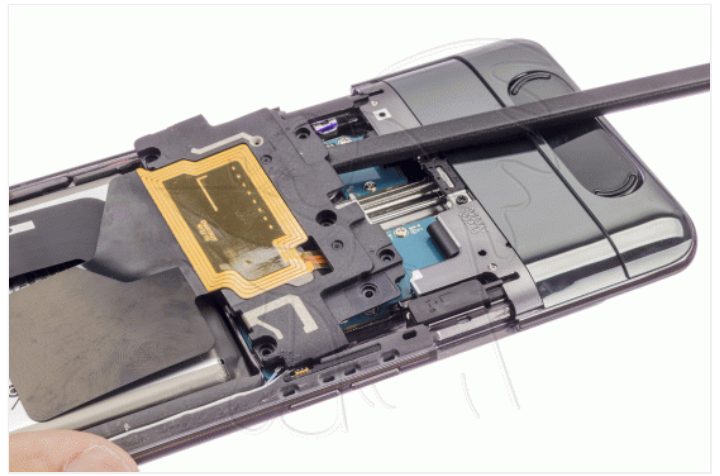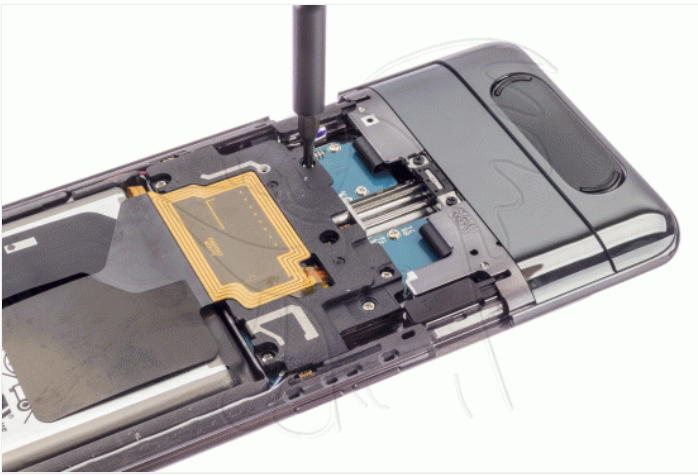

### Step 3 - We disconnect battery

We disconnect the battery to work with greater security.



## Step 4 - Speaker

We remove the seven Phillips screws (PH # 00) that hold the speaker module, and with the help of a flat tool we will unhook it.



## Step 5 - Components

We disconnect all components that are connected to the faulty auxiliary board.







## Step 6 - Tray

We remove the tray from the cards.





## Step 7 - Auxiliary board

We remove the Phillips screw (PH # 00) that holds the auxiliary plate, and with the help of a flat tool we will unhook it.



## Step 8 - Fingerprint reader

We remove the two Phillips screws (PH # 00) that hold the fingerprint reader that we have to replace, and with the help of flat tweezers we will take it off.

