



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Samsung Galaxy Tab S6 Bottom speakers

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Heat-opening thermal mat, CPB320

69,61 €



Conjunto of 3 espátulas of desmontaje of tablets and smartphones

3,97 €



Opening tool Smartphone, tablet

2,19 €



Special SAT 0.75mm high friction PVC pick

1,07 €






PREMIUM screwdriver with 24 magnetic replacement bits

10,41 €

Step 1 - Fullscreen


We apply heat to the screen to soften the adhesive that holds it, and with the help of a tool thin enough, we will open a hole to introduce plastic spikes, with which we will be less likely to damage the screen. When completely detached, we must unhook the interconnection flex that joins it to the motherboard.

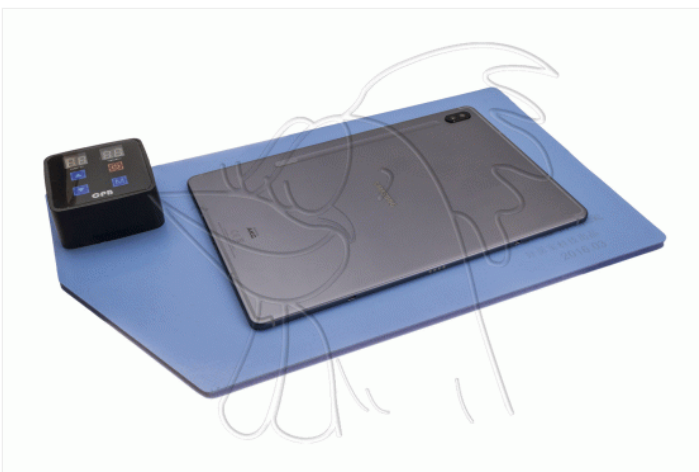


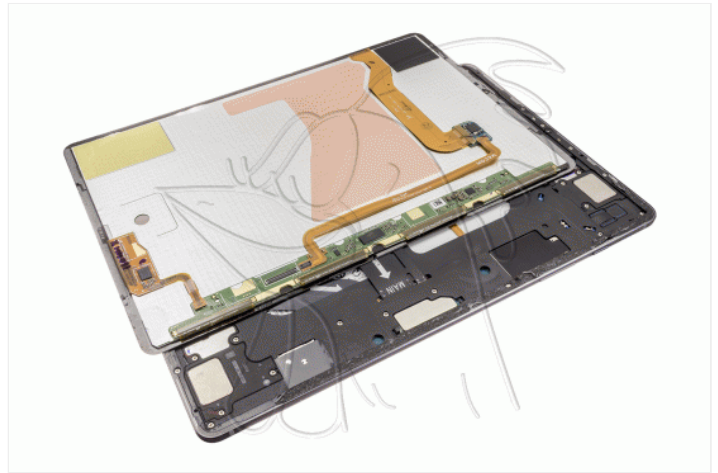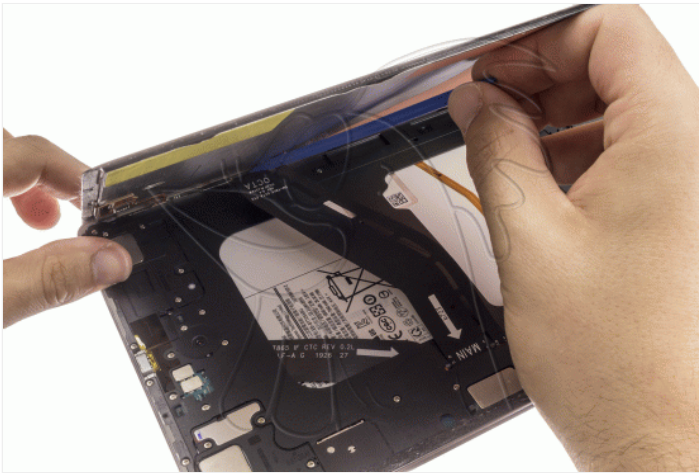

Step 2 - Intermediate housing



Remove the thirty-eight Phillips screws (PH # 00) that hold the intermediate housing, and we can now unhook it.

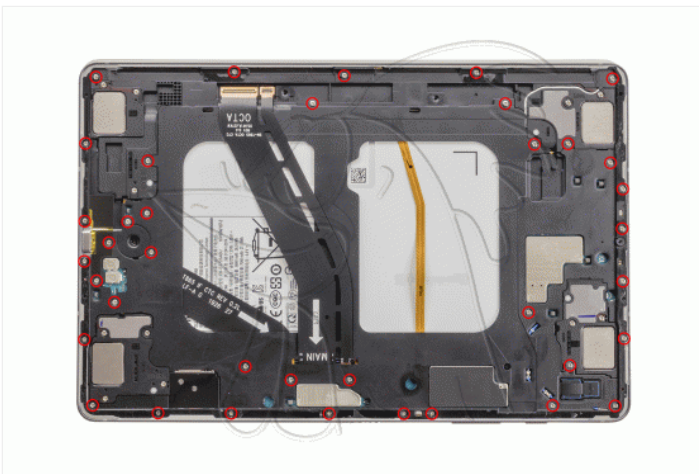

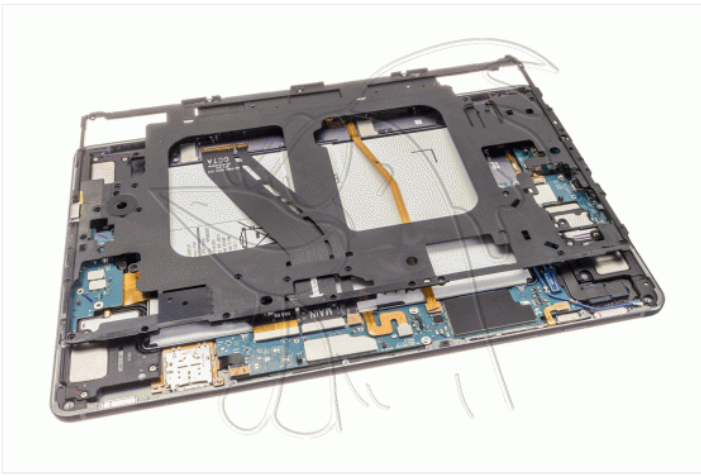


Step 3 - We disconnect battery

We disconnect the battery to work with greater security.

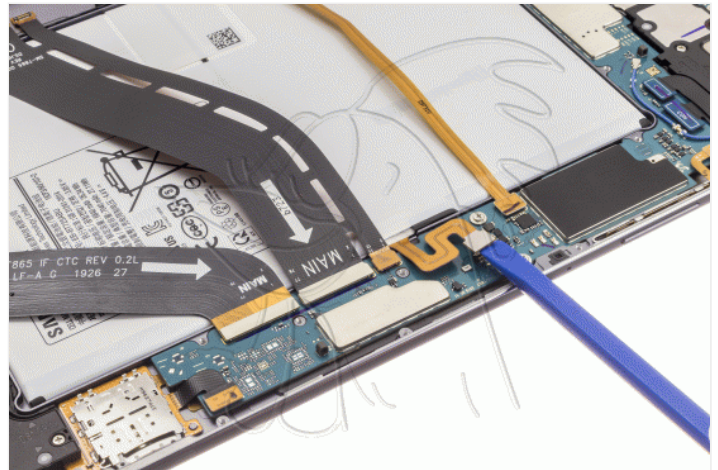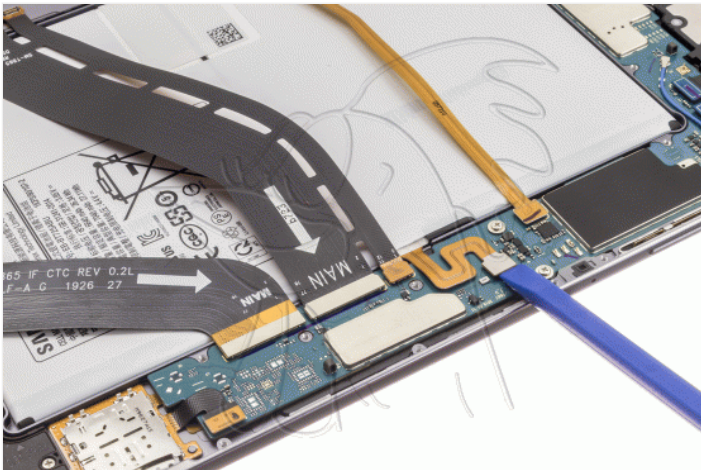

Step 4 - Auxiliary board

We disconnect the interconnection flex from the motherboard and remove the auxiliary board.

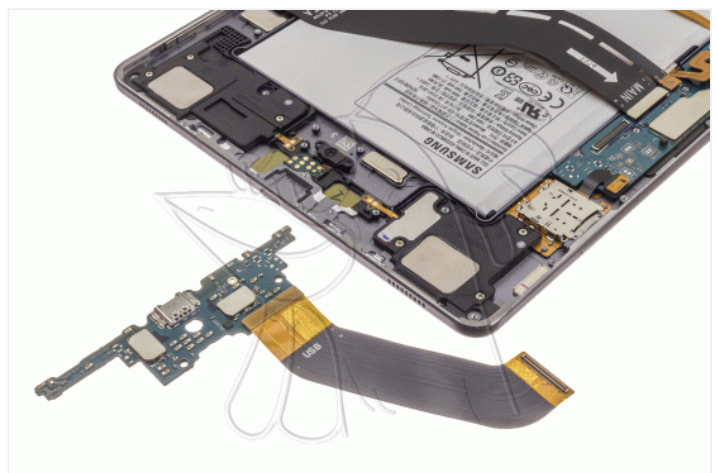

Step 5 - Bottom speakers

Remove the six Phillips screws (PH # 00) that hold both speakers, and we can take them off.

