



Step by step tutorial: of Honor 10 Lite Drums

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



HB396286ECW
battery for Honor 10
Lite (HRY-
LX1)/Huawei Psmart

14,43 €



Set of 5 metal picks
for opening

3,09 €



Heat-opening thermal
mat, CPB320

69,61 €



SIM card removal
tool for all brands

1,61 €



Opening tool
Smartphone, tablet

2,19 €



Pinza antiestática
ESD redondeada

3,06 €



Special SAT 0.75mm
high friction PVC pick

1,07 €



Suction cup to
separate screens in
general

5,25 €



6-in-1 screwdriver, K-
8107 with different
heads, in blister

7,52 €

Step 1 - SIM tray

We remove the SIM tray with a SIM removal tool.





Step 2 - Back case

Heat the terminal at 80 ° for 2 minutes to soften the adhesive on the back cover.

With the help of suckers we will introduce a metal prong between the back shell and the terminal. We will exchange it with a plastic pick to make the outline if it scratches the frame.

We will do all the contour until we get the back cover off.






Step 3 - Battery cover

Unscrew the Phillips screws (PH # 00) that hold the top antenna to the phone.

We will disconnect the flex from the fingerprint reader and remove the battery cover.

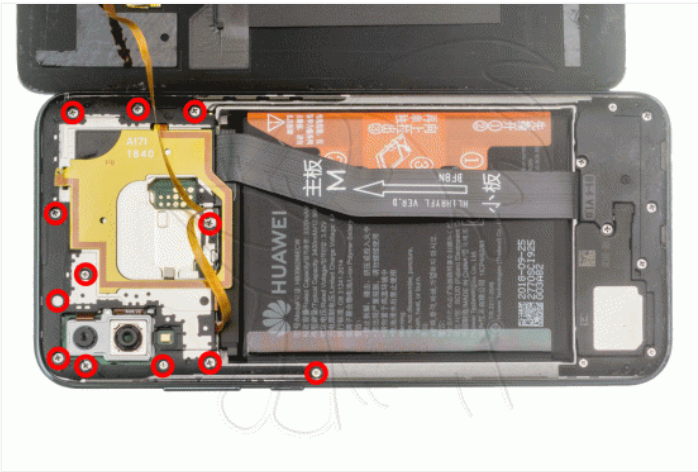

Step 4 - Drums

We disconnected the interconnection flex and the battery flex.

Pulling the adhesives that hold the battery will detach it until it is removed.

