



**NadieMeLlamaGallina.com**

Porque Yo Lo Reparó

## Step by step tutorial: of Motorola Moto G6 Play Auxiliary plate

For this tutorial you will need the following spared parts and tools that you cant get at our online store [Impextrom.com](http://Impextrom.com)  
Click on a tool for visit the website.

|                                                                                                                                                     |                                                                                                                                                                             |                                                                                                                                                                                 |                                                                                                                                            |                                                                                                                                                |                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>Set of 5 metal picks<br/>for opening</p> <p>3,09 €</p>          |  <p>Heat-opening thermal<br/>mat, CPB320</p> <p>69,61 €</p>                                |  <p>SIM card removal<br/>tool for all brands</p> <p>1,61 €</p>                                 |  <p>Opening tool<br/>Smartphone, tablet</p> <p>2,19 €</p> |  <p>Pinza antiestática<br/>ESD redondeada</p> <p>3,06 €</p> |  <p>Set of professional<br/>tools for opening<br/>smartphones and<br/>tablets</p> <p>18,97 €</p> |
|  <p>Special SAT 0.75mm<br/>high friction PVC pick</p> <p>1,07 €</p> |  <p>6-in-1 screwdriver, K-<br/>8107 with different<br/>heads, in blister</p> <p>7,52 €</p> |  <p>Auxiliary plate<br/>PREMIUM with<br/>components for<br/>Motorola Moto G6</p> <p>5,68 €</p> |                                                                                                                                            |                                                                                                                                                |                                                                                                                                                                                     |

### Step 1 - SIM tray

With a SIM removal tool we remove the SIM tray.





## Step 2 - Back case

We apply heat on the back of the mobile. We will heat for 2 minutes at 80 degrees.

We will introduce a metal prong between the back cover and the mobile. We will exchange it for a plastic spike to avoid scratching it. We will do all the contour taking off the back cover.











### Step 3 - Fingerprint reader


Unscrew the two Phillips screws (PH # 00) that hold the metal sheet that protects the flex of the fingerprint reader. We will remove it and disconnect the flex from the fingerprint reader.

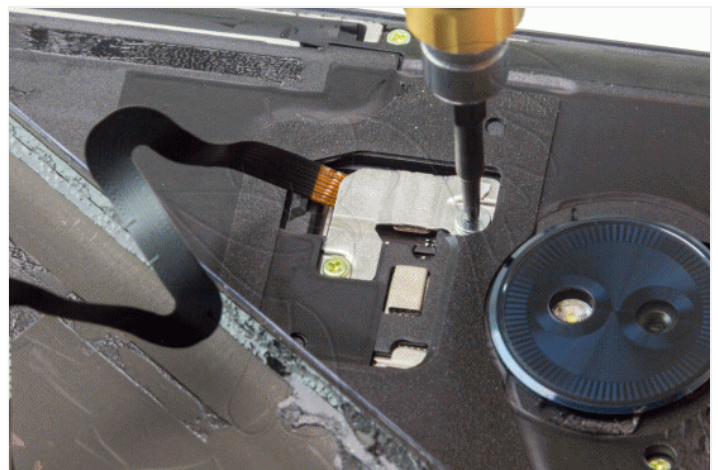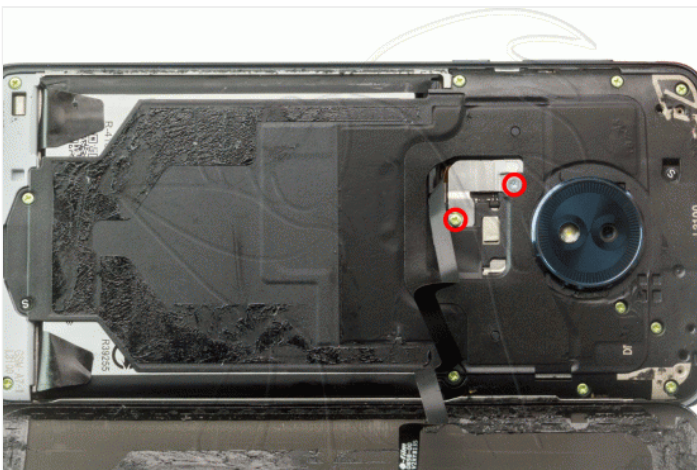

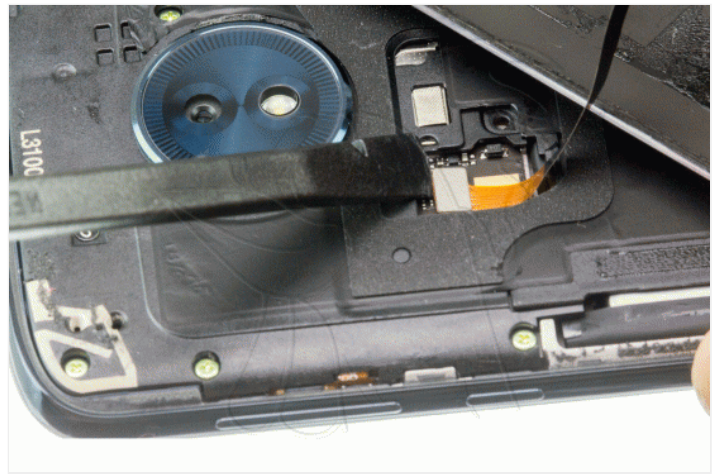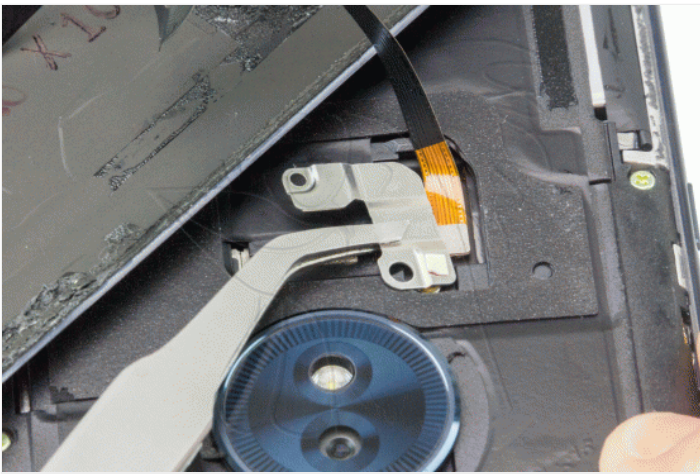

#### Step 4 - Intermediate housing

Unscrew the Phillips screws (PH # 00) that hold the intermediate housing and remove it.

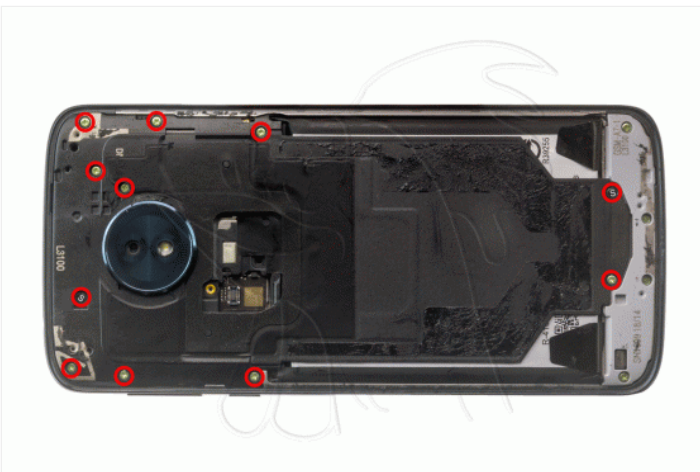







## Step 5 - Lower housing

Unscrew the Phillips screws (PH # 00) that hold the lower case, disconnect the interconnection flex and disengage the lower case.





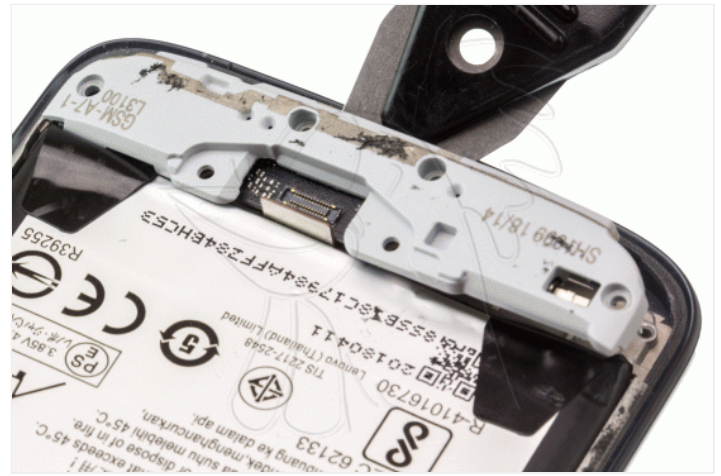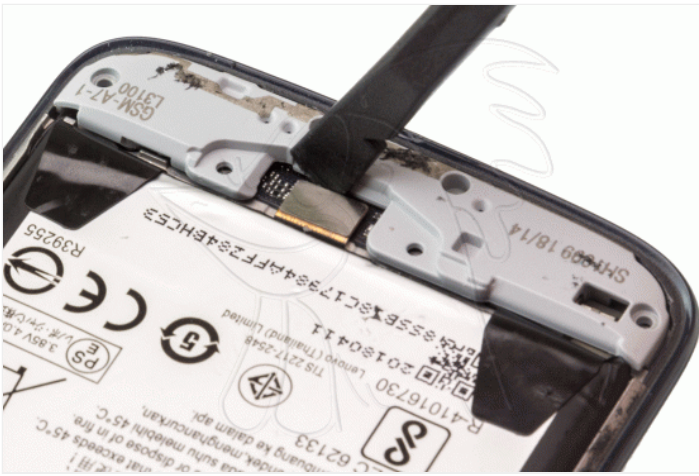

## Step 6 - Auxiliary plate

Unscrew the Phillips screws (PH # 00) that hold the auxiliary plate to the lower housing. Disconnect the coaxial cable and remove the auxiliary plate.

