



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Wiko View 3 Pro Fingerprint reader

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Heat-opening thermal mat, CPB320

69,61 €



Opening tool Smartphone, tablet

2,19 €



Pinza antiestática ESD redondeada

3,06 €



Special SAT 0.75mm high friction PVC pick

1,07 €



6-in-1 screwdriver, K-8107 with different heads, in blister

7,52 €

Step 1 - Back case

We apply heat to the back shell, and with the help of a fine tool we will open a gap to introduce a plastic spike, and thus run less risk of scratching the case.






Step 2 - Intermediate housing


We extract the seven Phillips screws (PH # 00) that hold the intermediate casing, take off the flex of the NFC antenna, and with the help of a flat-tipped tool we unhook the intermediate casing.



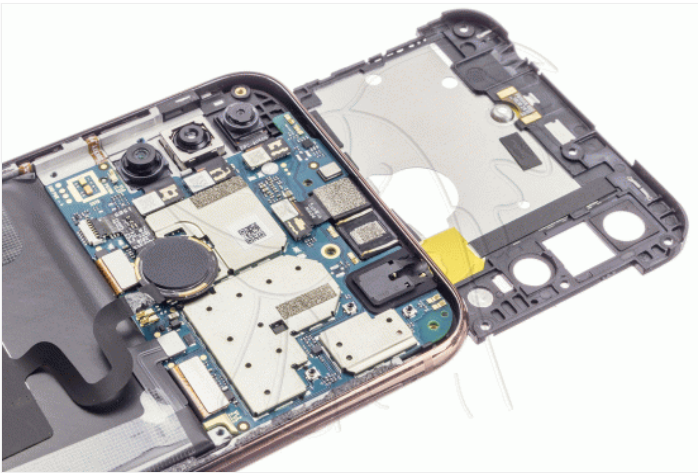

Step 3 - We disconnected battery

We disconnected the battery to work with greater security.

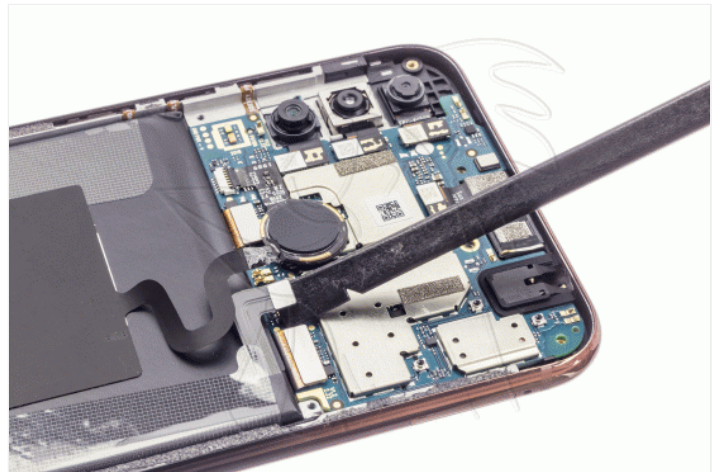

Step 4 - Fingerprint reader

