



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Blusens Smart Studio Handset

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



10pcs Anti-static
Rubber ESD Finger
Cots

2,68 €



Professional
disassembly spatula
for mobile phones
and smartphones

2,71 €



Opening tool
Smartphone, tablet

2,19 €



Terminal opening
tool, plastic

0,71 €



12.01 x 6.03 x 2.76
mm generic earpiece
speaker

0,36 €

Step 1 - characteristics

Cameras: 5Mpx rear camera, and 2Mpx front camera.

Processor: 4 Quad-Core 1.2GHz cores.

Battery: 2000mAh

Display: 5 inches, 854x480

Dimensions: 145 x 73 x 8.5 mm

Weight: 143 g

Memory: 1Gb of RAM and 8Gb of physical storage

Operating system: Android 4.4 kitkat



Step 2 - Back case

With the help of an opening tool remove the back cover.



Step 3 - Battery

Remove the battery, if necessary you can use an opening tool.





Step 4 - Cards

Remove all cards from the phone.





Step 5 - Intermediate housing

Remove the 10 Pentalobe screws.



Step 6 - Buttons

When starting to lift the intermediate casing, the side buttons will fall.



Step 7

With the help of an opening tool unhook the intermediate housing.







Step 8 - Cable coaxial

Take off the flex from the flash, disconnect the rear camera with the help of an opening tool, and remove the coaxial cable using a pair of tweezers.




Step 9 - Rear camera


Remove the rear camera with the help of all the necessary tools.

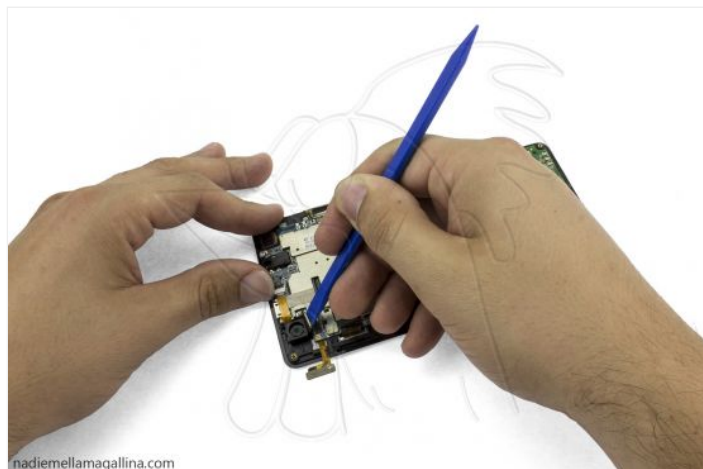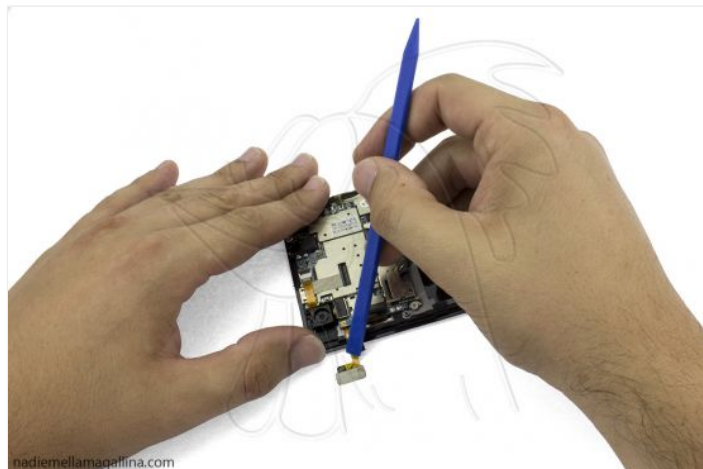

Step 10 - Cables flex

Disconnect all flex cables from the motherboard.

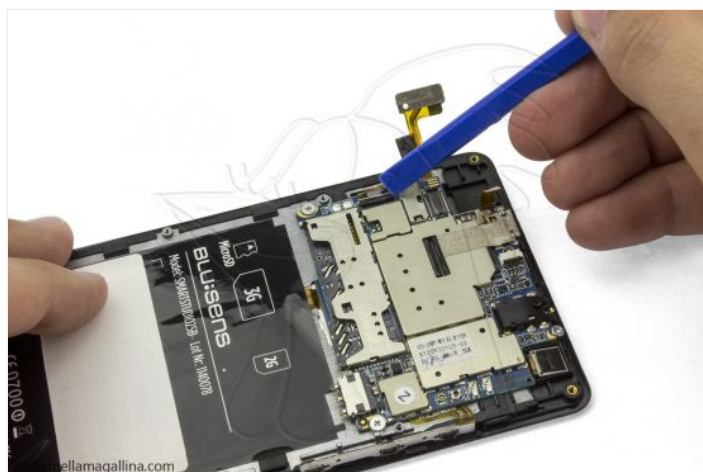

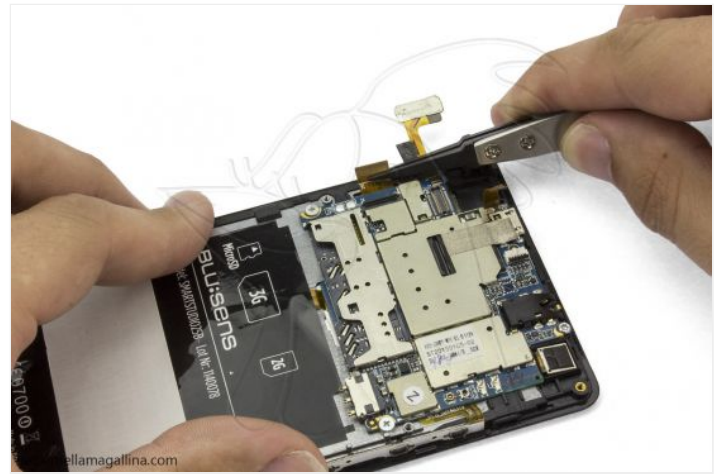

Step 11 - Side button flex



Take off the chassis the flex of side buttons, using a metal opening tool.



Step 12

Remove the 3 screws that hold the motherboard.

Beware, because it consists of 2 Phillips screws and one Pentalobe.

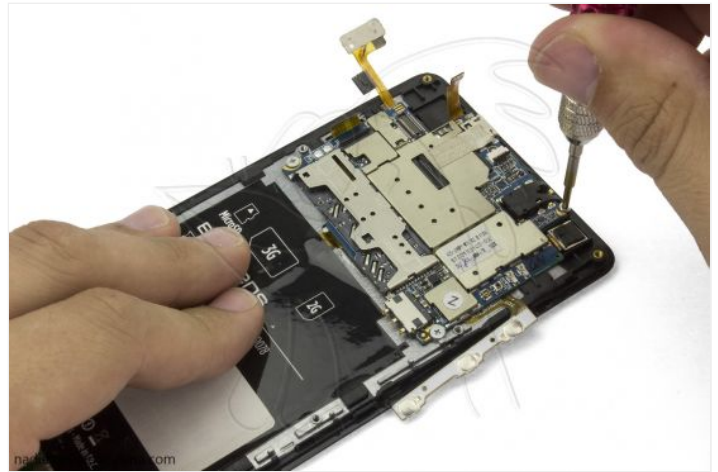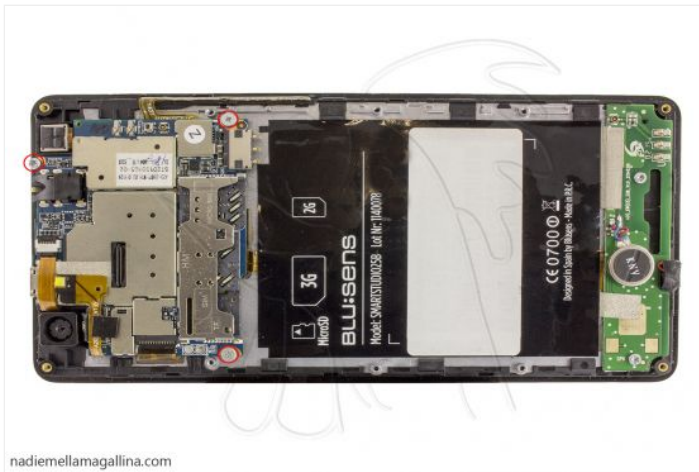

Step 13

Lift the motherboard.



Step 14 - Handset

Finally, with the help of an opening tool remove the handset.

