


Step by step tutorial: of Energy Phone Pro 4G Navy Battery

For this tutorial you will need the following spared parts and tools that you cant get at our online store <u>Impextrom.com</u> Click on a tool for visit the website.

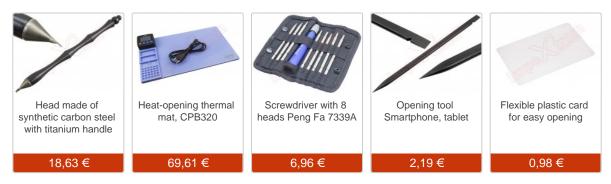

Step 1 - Remove back cover

We will heat the back cover of the phone to soften the adhesive that holds it. Heating it to about 60 ° C for about 1 minute should be enough.

We will introduce an opening tool between this and the frame and sliding it around the contour, we will eliminate the adhesive.



nadiemellamagallina.com







nadiemellamagallina.com








Step 2 - Intermediate housing

Remove the seven Phillips screws (PH # 00) that hold the housing and then undo it.

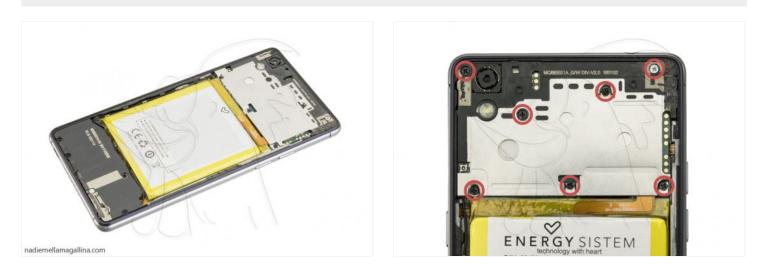











To finish, we disconnected the battery and detached it from the chassis.













