



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of Sony Xperia XZ Premium Charge connector

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Connector charger,
data and accesories
for Sony Xperia XZ
Premium, G8141

4,40 €



Head made of
synthetic carbon steel
with titanium handle

18,63 €



Opening tool
Smartphone, tablet

2,19 €



Professional opening
plastic tool, iPlastix

7,56 €



Stripper gun, hot air
welder for repairs

15,59 €



PREMIUM
screwdriver with 24
magnetic
replacement bits

10,41 €



Touch ESD glove, for
antistatic protection,
size M

4,16 €



Antistatic and ESD
tactile glove, size S

5,30 €

Step 1 - Back case

To begin we must apply heat to all the edges of the casing, and then take off using a tool fine enough.






Step 2 - Covers

We extract the 3 Phillips screws (PH # 00) that hold the two covers that we removed in the photographs.





Step 3 - Armor

Disconnect the battery, and under the flex there is a screw that holds the shield that is on the camera, remove the Phillips screw (PH # 00) and we can unhook the shield.

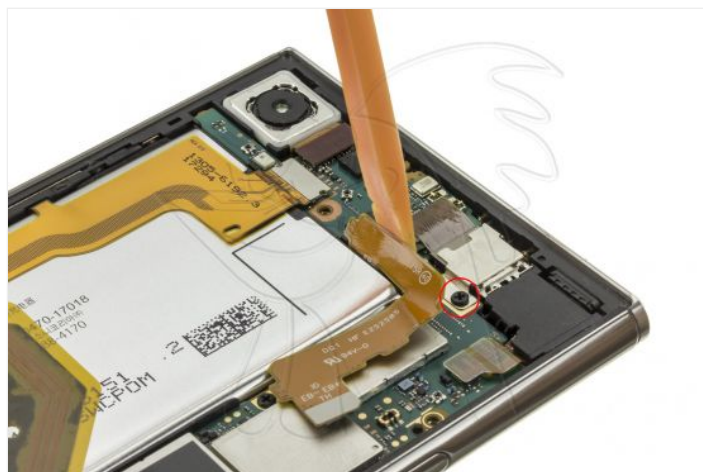

Step 4 - Lower housing with vibrator

Remove the four phillips screws (PH # 00) that hold the housing, and with the help of a flat tool we will disengage it.

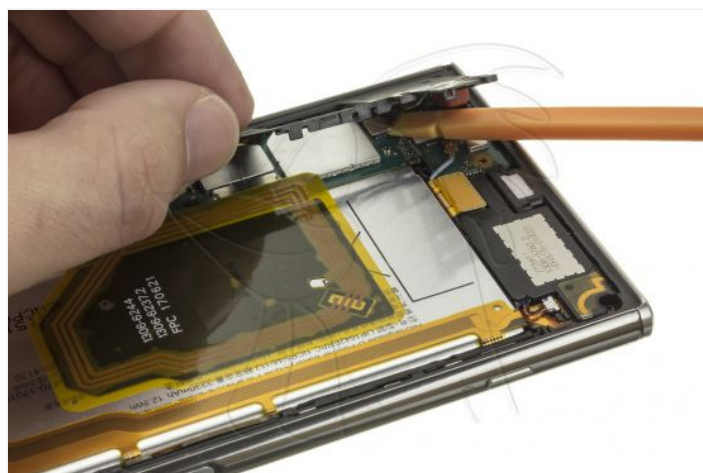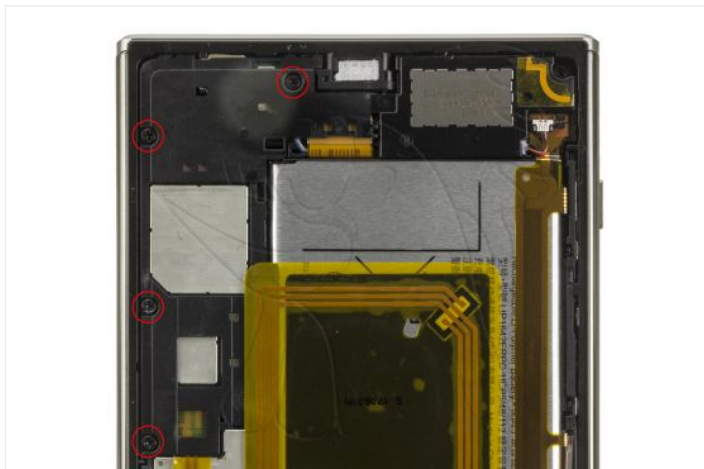

Step 5 - Cameras


We disconnect and remove the cameras.



Step 6 - Components

We disconnect everything that is connected to the motherboard.



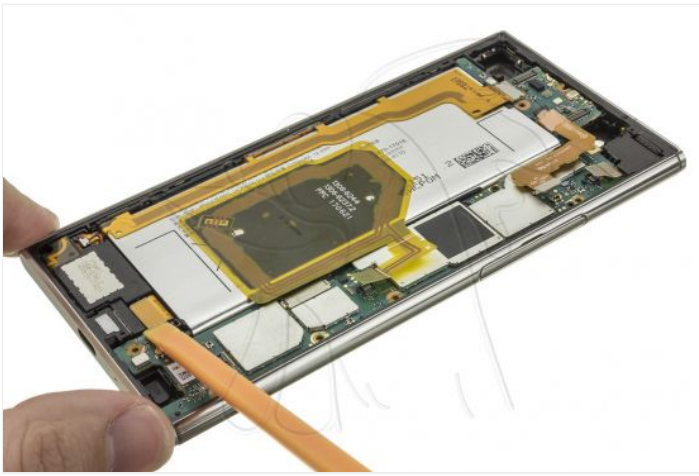

Step 7 - Motherboard

We remove the tray from the cards, remove the Phillips screw (PH # 00) that holds the motherboard, disconnect the flex from the screen and we can remove the motherboard.





Step 8 - Speaker with antenna

We remove the Phillips screw (PH # 00) and unhook the speaker with antenna.



Step 9 - Charge connector

Finally we just have to take off and remove the damaged load connector that we are going to replace.

