



NadieMeLlamaGallina.com

Porque Yo Lo Reparó

Step by step tutorial: of Sony Xperia M5 Audio connector

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Head made of
synthetic carbon steel
with titanium handle

18,63 €



Heat-opening thermal
mat, CPB320

69,61 €



Opening tool
Smartphone, tablet

2,19 €



Special SAT 0.70mm
PET pick, high friction
and resistance

1,25 €



Smartphones and PC
repair tool case

35,92 €



Touch ESD glove, for
antistatic protection,
size M

4,16 €



Antistatic and ESD
tactile glove, size S


5,30 €

Step 1 - Remove back cover

We started by heating the back cover at about 60 ° C for about 1 minute.

With it hot, we introduce a flat tool between it and the frame. Sliding it around the contour will get it off.





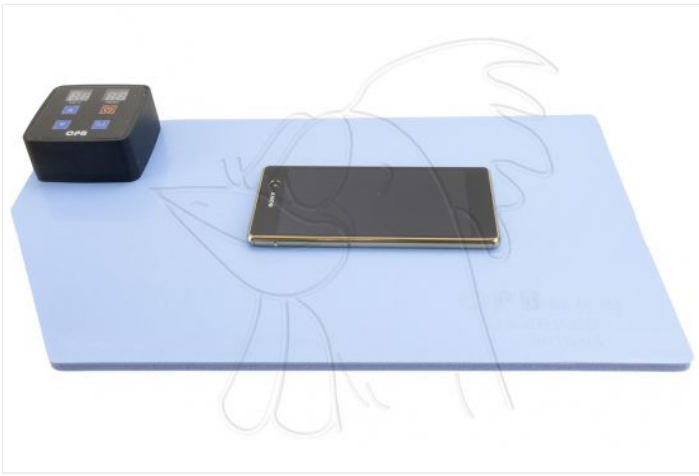

Step 2 - Disconnect components

We remove the Torx T4 screws indicated in the first image and then disconnect the front camera, the flex of the battery and the flex of the charging connector.

We remove the casing from the top and remove the camera delanera.

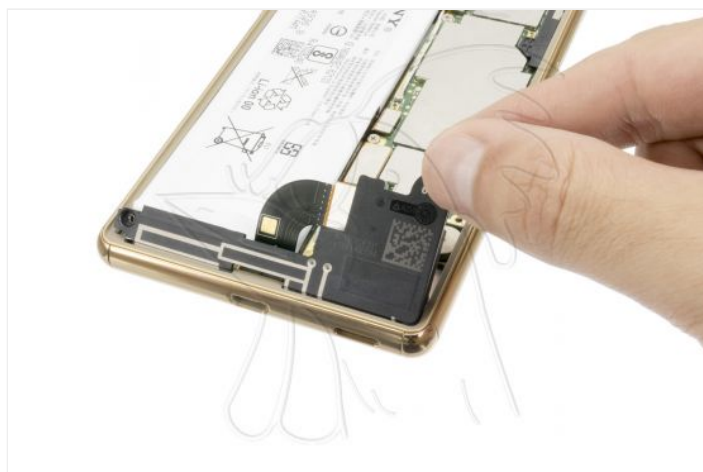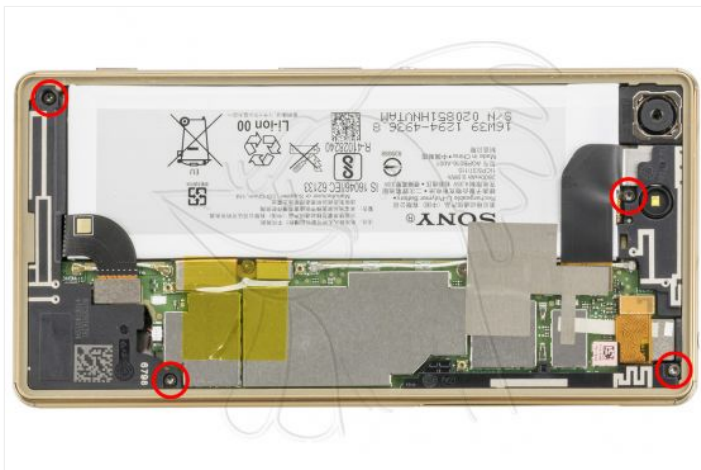









Step 3 - Disconnect components

Now we disconnect the flex from the rear camera, the flex from the side buttons, the charge connector, the audio connector and the coaxial antenna cable.

Remove the two Phillips screws (PH # 00) that hold the motherboard and disengage it.

It is recommended to remove the SIM / SD trays to remove the plate.

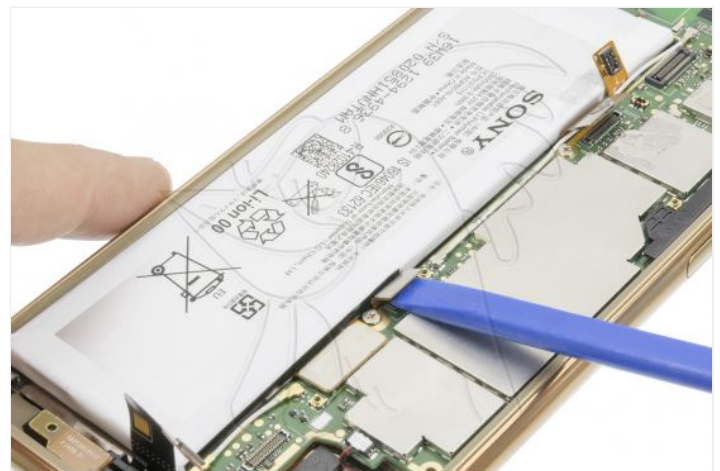

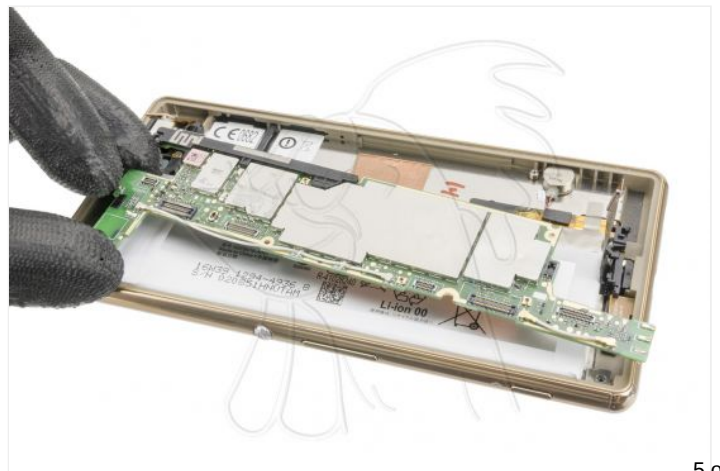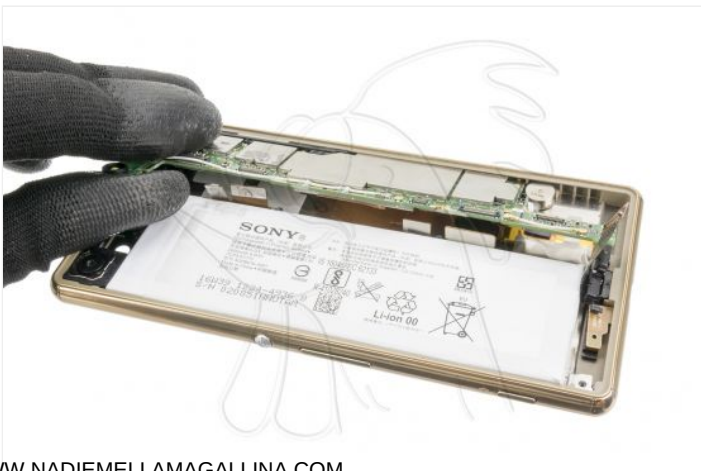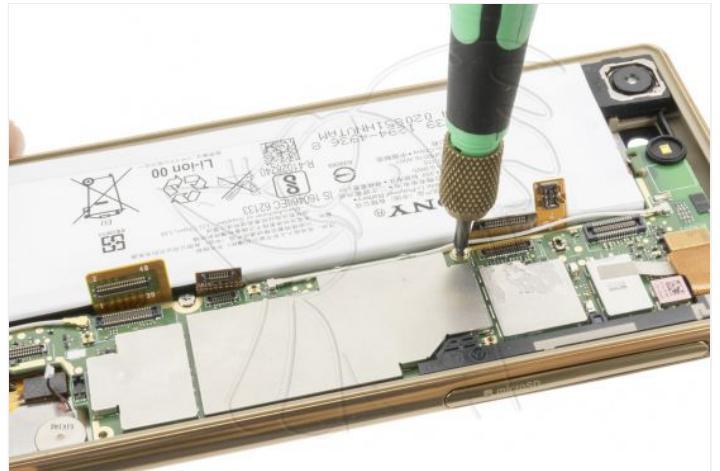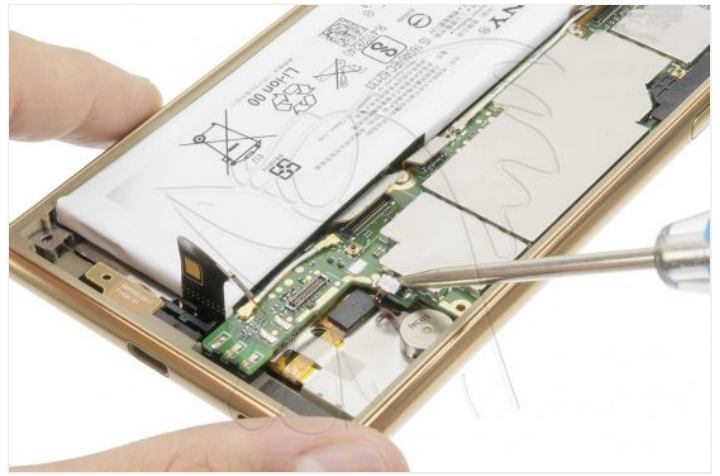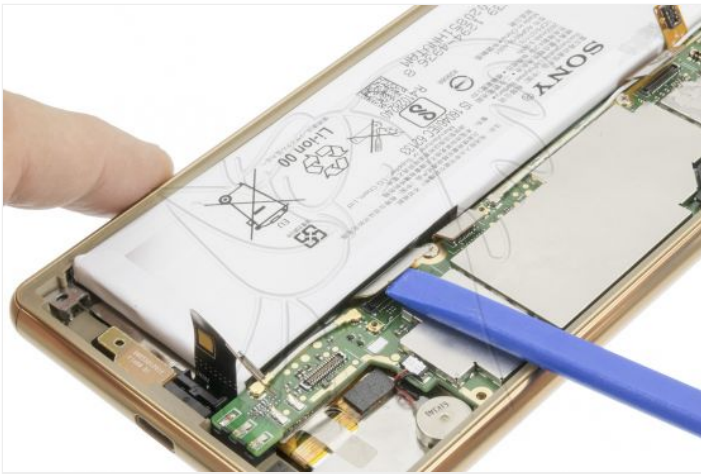

Step 4 - Audio connector

To finish, we remove the plastic support and disengage the audio connector.



