



NadieMeLlamaGallina.com

Porque Yo Lo Reparo

Step by step tutorial: of BQ Aquaris 5´7 Front camera

For this tutorial you will need the following spared parts and tools that you cant get at our online store Impextrom.com
Click on a tool for visit the website.



Terminal opening
tool, plastic

0,71 €



Special SAT 0.75mm
high friction PVC pick

1,07 €



Screwdriver phillips
Head Size 00

1,06 €



Professional fine
point tweezers, ST-10

3,17 €

Step 1 - Back cover

Before starting make sure the phone is switched off.

Open the back cover with the opening tool, this will prevent scratches or damage.



Step 2

Separate the back cover.



Step 3 - Battery

Remove the battery by pulling on the bottom.





Step 4 - SIM card

Remove the SIM card by pulling it with your finger.



Step 5 - Micro SD card

Remove the micro SD card.



Step 6 - Intermediate housing

Remove the 14 Phillips screws, including the one that is hidden behind the "No broken" seal.





Step 7

Separate the housing with the opening tool.



Step 8 - Antenna coaxial cable

Disconnect the coaxial cable at both ends.



Step 9


Once disconnected pull it to remove it.



Step 10 - Flex side buttons.

Peel off the flexes of the side buttons with the pick.

Be careful not to cut the flex cable with the barb.

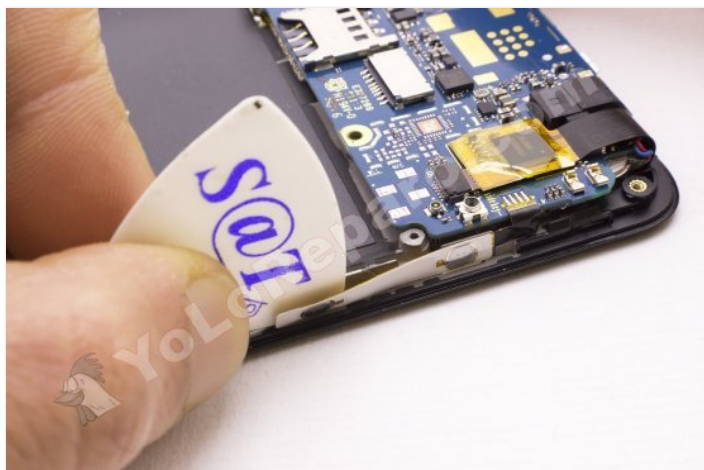

Step 11 - Motherboard

Disconnect the data cable from the screen by operating the connector tab and gently pulling the cable.



Step 12

Remove the Phillips screw and separate the plate from the top.





Step 13

Disconnect the data flex that holds the plate by pulling on the tab of the connector and gently pulling the cable.



Step 14 - Front camera

Unplug and remove the front camera by pulling it gently.

